


MANUAL RELEASE INSTRUCTIONS

for
GDS Series Sliding Gate Operators Drives
Models GDS 550P & L Series
GDS 630P & L Series
GDS 940P Series

- Should the power fail or for some other reason the gate does not operate in the normal motorised manner, manual disconnection can be achieved by:-
- Turn power off to the control box and isolate.
- By using the key, unlock the door on the back of the cover.

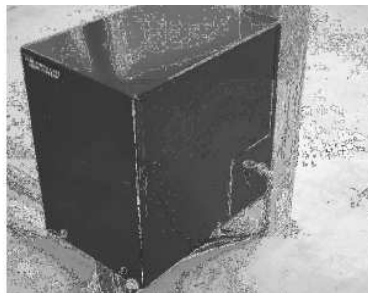

- Turn the large knob anticlockwise which will release the drive



- Manually slide open the gate.
- When the operator is to be re-established into electrical operation:
- Manually slide gate to midway position.
- Tighten large knob, clockwise, to engage the drive.
- Lock the door on the cover.
- Turn Power On.
- Press the transmitter to operate the gate.
- Note: The gate will run slow until it comes onto the open stop.